



Elite Protection Program®

Certified Pre-owned Wrap Component Coverage



Tranquility. Beyond Protection.

around the clock coverage



You have immediate access to Emergency Roadside Assistance when and where you need it – 24 hours a day, 365 days a year – by simply calling the dedicated toll-free Customer Assistance number

COVERAGE SO EXTENSIVE, ONLY A FEW ITEMS ARE NOT COVERED:

Paint, exhaust system, carpet, glass, upholstery, soft trim, weatherstripping, battery, clutch disc (manual transmission), tires, disc brake rotors, headlight assembly, squeaks, rattles, water leaks, wind noise, and normal maintenance items as specified in the Infiniti Owners Manual are not covered. Normal maintenance services not covered include: engine tune-up, wheel balance and alignment, spark plug and wire replacement/adjustment, timing belt replacement, fluid and lubricant replacement/replenishment, wiper blade replacement, headlight aiming, filter replacement, brake pad and shoe replacement, and shock absorbers. For complete information concerning components covered, and those components which are excluded from coverage, please refer to your contract/agreement.

VEHICLE COMPONENTS COVERED

Vehicle Components Covered	PNC	CPO Wrap	CPO Only
AUDIO & VIDEO COMPONENTS			
AUDIO/VIDEO/NAVIGATION			
REAR WINDOW ANTENNA AMPLIFIER	25190	■	
NAVI SPEAKER RELAY	25273	■	
NAVI GPS ANTENNA ASSEMBLY	25957	■	
CLARION AUDIO/COMBO UNIT	2790A	■	
PANASONIC AUDIO/COMBO UNIT	2790C	■	
SPEAKER	27933	■	
SPEAKER — WOOFER	27934	■	
BOSE SPEAKER	2793A	■	
ANTENNA	27960	■	
RADIO FINISHER	28041	■	
AV/SAT RADIO TUNER ASSY.	28050	■	
PRE-AMP SPEAKER AMPLIFIER	28060	■	
REAR AMPLIFIER	28063	■	
BODY SONIC AMPLIFIER	28067	■	
CLARION SPEAKER AMPLIFIER	2806C	■	
SPEAKER — WOOFER	2806H	■	
POWER SUPPLY BOX	28089	■	
VIDEO OR NAVI DISPLAY ASSEMBLY	28090	■	
DISPLAY MOTOR ASSY.	28092	■	
INTEGRATED DISPLAY ASSY.	28094	■	
FES VIDEO CASSETTE PLAYER	28106	■	
DVDUNIT	28119	■	
FRONT DOOR TWEETER	28137	■	
REAR DOOR TWEETER	28138	■	
CD AUTO CHANGER	28184	■	
PANASONIC CD PLAYER	2818C	■	
SONY CD PLAYER	2818D	■	
SAT ANTENNA ASSY.	28208	■	
ANTENNA ROD/MAST	28215	■	
SAT ANTENNA BASE COVER	28228	■	
REMOTE RADIO SWITCH	28268	■	
BONDING(GROUNDING) WIRE	28360	■	
PANASONIC CASSETTE DECK	2920C	■	
SOUND BALANCER	29350	■	
CD CHANGER CARTRIDGE	B8118	■	
CELLULAR			
SPEAKER ASSEMBLY	AA170	■	
COMPACT COMMUNICATOR	AA180	■	
MOBILE ENTERTAINMENT SYSTEM			
DASH AUX AUDIO JACK	26823	■	
FESVIDEO MONITOR	28091	■	
FESVIDEO CASSETTE PLAYER	28706	■	
MES	AA018	■	
BODY & INTERIOR			
BODY			
BACK DOOR LOCK ACTUATOR	25189	■	

Vehicle Components Covered	PNC	CPO Wrap	CPO Only
SWITCH — SUN ROOF SLIDE	25191	■	
RELAY — SUN ROOF	25192	■	
RELAY—FUEL LID OPENER	25271	■	
SWITCH — POWER SEAT	25310	■	
SWITCH_CLOSURE, BACK DOOR	25386	■	
SWITCH — FUEL FILLER LID OPENER	25394	■	
SWITCH — REMOTE CONTROL MIRROR	25570	■	
HEATED MIRROR SWITCH	25580	■	
CONT UNIT - CLOSURE	27573	■	
SEAT SPEAKER	28172	■	
CONT UNIT - CLOSURE, TRUNK LID	28563	■	
RELEASE CABLE	36329	■	
TRUNK LID INSIDE RELEASE HANDLE	36400	■	
HINGE ASSY. — HOOD	65400	■	
HOOD HINGE TORSION BAR	65420	■	
HOOD STAY	65470	■	
MALE ASSY. — HOOD LOCK	65601	■	
CABLE — HOOD LOCK CONTROL	65620	■	
SECONDARY HOOD LOCK CONTROL ASSY.	65670	■	
ASSIST AIR BAG LID	68290	■	
FRAME — SUN ROOF	73640	■	
RAIL-GUIDE	73662	■	
BRACKET — SUN ROOF MOTOR	73670	■	
DEFLECTOR — AIR, SUN ROOF	73675	■	
MOTOR — SUN ROOF	73685	■	
SUN ROOF ASSY.	73856	■	
DRAIN HOSE	73876	■	
CLAMP/BELT — SPARE TIRE	74630	■	
SWITCH — TRUNK LID OPENER	78526	■	
SWITCH — FUEL FILLER LID OPENER	78826	■	
FUEL LID OPENER ACTUATOR	78852	■	
REAR WINDOW REGULATOR MOTOR	79701	■	
HINGE ASSY. — FRONT DOOR	80400	■	
LINK DOOR — STOPPER	80430	■	
LOCK ASSY. — DOOR	80502	■	
ROD ASSY. — REMOTE CONTROL	80512	■	
STRIKER ASSY. — DOOR LOCK	80570	■	
CYLINDER ASSY. — DOOR LOCK	80600	■	
REGULATOR ASSY. — FRONT DOOR	80700	■	
HINGE ASSY. — REAR DOOR	82400	■	
LOCK ASSY. — REAR DOOR	82502	■	
STRIKER ASSY. — DOOR LOCK	82570	■	
BACK DOOR OPEN/CLOSE MOTOR	82580	■	
REGULATOR ASSY. — DOOR WINDOW	82700	■	
LOCK ASSY. — FUEL FILLER LID	84360	■	
STRIKER — BACK DOOR LOCK	84420	■	
PARCEL SHELF TRUNK OPEN LEVER	84442	■	
CABLE — FUEL FILLER/TRUNK LID OPENER	84450	■	
CYLINDER — TRUNK LID/TAIL GATE	84460	■	
SOLENOID/MOTOR — TRUNK LID OPENER	84471	■	
HINGE ASSY. — TRUNK LID/BACK DOOR	84510	■	
STAY SET, TENSION BAR — TRUNK LID	84532	■	
SWITCH — TRUNK LID OPENER CANCEL	84665	■	

Vehicle Components Covered	PNC	CPO Wrap	CPO Only
ACTUATOR — Q45 TRUNK LID OPENER	84680	■	
ACTUATOR-TAIL GATE OPENER	90551	■	
REAR WASHER TUBE	92401	■	
REAR HEATER HOSE	92420	■	
REAR HEATER TUBE	92433	■	
REAR BODY HEAT INSULATOR	93828	■	
MIRROR — REMOTE CONTROL	96302	■	
ACTUATOR ASSY. — MIRROR	96367	■	
CYLINDER ROOF LOCK	97102	■	
INTERIOR			
COMBINATION METER LENS	24813	■	
RR SEAT BACK RELEASE RELAY	25298	■	
SEAT SLIDE SWITCH	25314	■	
HEATED SEAT RELAY	25325	■	
REAR POWER SEAT SWITCH	25494	■	
POWER FOLD SEAT SWITCH	25502	■	
SWITCH - 3RD SEAT RECLINING	25945	■	
BLOWER MOTOR COVER	27220	■	
SEAT SPEAKER GRILLE	28176	■	
SPEAKER GRILLE	28177	■	
LOCK SET — GLOVE BOX LID	68630	■	
LISTING — WIRE	73921	■	
PARTITION WINDOW SHADE ASSY.	82275	■	
SEAT AIR CONTROL SWITCH	87016	■	
FAN MOTOR ASSY.	87305	■	
FAN MOTOR CONTROL UNIT	87306	■	
POWER FOLD CONTROL UNIT	87316	■	
LIFT DEVICE ASSY.	87400	■	
DEVICE ASSY. — RECLINING	87401	■	
POWER SEAT RECLINER DRIVE CABLE	87403	■	
BOLT — SPECIAL	87408	■	
SLIDE ASSY.	87501	■	
FRONT LEFT SEAT SLIDE ASSY./BRACKET	87502	■	
POWER SEAT DRIVE CABLE	87503	■	
SWITCH LIMIT FR SEAT	87504	■	
POWER LUMBAR SUPPORT SEAT ASSY.	87641	■	
SLIDE — ASSY.	87653	■	
LIFT ASSY.	87654	■	
ELECTRIC RECLINING DEVICE ASSY.	87655	■	
HARNASS ASSY. - REAR SEAT	88019	■	
UNIT ASSY. - HEATER, REAR SEAT CUSHION	88335	■	
REAR RECLINING DEVICE ASSY.	88451	■	
REAR POWER SEAT MOTOR	88510	■	
REAR POWER SEAT SLIDE	88551	■	
UNIT ASSY. - HEATER, REAR SEAT BACK	88635	■	
MIRROR ASSY. — INSIDE	96321	■	
VISOR — SUN	96400	■	
HOME LINK VISOR — SUN	96401	■	
INDICATOR — A/T CONTROL LEVER	96940	■	
REAR WINDOW SHADE GEAR/MOTOR ASSY	97581	■	
AUTO DRIVE POSITION CONTROL	98800	■	

*Replacement of this assembly must be coded with the PNC of the causal failed part.

BODY & INTERIOR CONTINUED		CPO Wrap	CPO Only
Vehicle Components Covered	PNC		
RETRACTABLE HARD TOP			
SWITCH ASSY. - FOLDING ROOF	25452		
CONTROL UNIT - FOLDING ROOF	28521		
LINKAGE P SHELF	79914		
MOTOR P SHELF	79915		
LATCH SUBFRAME	84376		
CENTERING HINGE	84410		
SWITCH SENSOR	84991		
MOTOR ASSY. - LOCK	91295		
STRIKER LATCH SUBFRAME FR	94377		
LINKAGE ASSY. - FOLDING ROOF	97006		
REAR LATCH ASSY.	97051		
MAIN DRIVE CYLINDER	97060		
TRUNK LID CYLINDER	97062		
HOSE - MAIN DRIVE CYLINDER	97063		
HOSE PAIR TRUNK LID CYLINDER	97064		
HOSE PAIR LATCH CYLINDER	97065		
CASIN - HYDRAULIC PUMP	97068		
LATCH ASSY. - RHT SIDE	97080		
HYDRAULIC PUMP	97091		
LOCK ASSY. - FOLDING ROOF	97095		
LATCH CYLINDER	97098		
SPRING CLIP TRUNK LID CYLINDER	97099		
BOWDEN CABLE	97138		
TUBE DRAIN	97168		
BRAKES			
IBA SWITCH	25122		
DISTANCE WARNING SW	25125		
TCS SWITCH ASSY.	25145		
ICC BRAKE HOLD RELAY	25184		
ICC STRNG SWITCH	25185		
ICC BRAKE SWITCH	25186		
ABS MOTOR RELAY	25187		
VDC/TCS/ABS RELAY BOX	25285		
VDC/TCS/ABS CONTROL ASSY.	25286		
SWITCH - STOP LAMP	25320		
CONTROL ASSY. - HAND BRAKE	36010		
SWITCH - PARKING BRAKE	36011		
PARKING BRAKE DAMPER	36055		
ROD - RELEASE	36327		
SPRING - HAND BRAKE LEVER	36337		
ROD/CABLE - HAND BRAKE/FRONT	36402		
NUT - HAND BRAKE CABLE ADJUST	36437		
ROD - CROSS CABLE	36451		
ROD - REAR CABLE	36452		
EQUALIZER	36518		
SPRING - RETURN	36545		
ADJUSTER - REAR CABLE	36547		
TIRE PRESSURE SENSOR SEAL	40702		
TIRE PRESSURE ANTENNA	40740		
YOKER - CALIPER	41025		
PIN - HOLD DOWN	41040		
PIN - PIVOT	41041		
SPRING - ANTI-SQUEAL	41083		
CLIP - ANTI-RATTLE	41086		
CALIPER ASSY. - FRONT	41110		
PISTON & SEAL	41120		
PLATE - FRONT BAFFLE	41151		
CALIPER ASSY. - REAR	44010		
BACK PLATE	44020		
BODY - CALIPER	44025		
PIN - HOLD DOWN	44040		
EXTENSION LINK	44075		
PIN - ANTI-RATTLE	44081		
SPRING - PAD	44082		
SPRING - RETURN, REAR BRAKE	44090		
LEVER ASSY. - TOGGLE	44095		
WHEEL CYLINDER ASSY.	44100		
TOGGLE LEVER	44118		
PISTON & SEAL	44120		
PLATE - BAFFLE	44151		
PARKING BRAKE ANCHOR	44180		
ADJUSTER ASSY.	44200		
CYLINDER ASSY. - BRAKE MASTER	46010		
CYLINDER-SIMULATOR, BRAKE STROKE	46011		
ELECTRIC UNIT-ABS ACTUATOR	46012		
CAP - RESERVOIR	46020		
SEAL - RESERVOIR TANK	46045		

Vehicle Components Covered	PNC	CPO Wrap	CPO Only
INDICATOR ASSY. - LEVEL	46048		
PISTON ASSY.	46063		
RING - SNAP	46082		
TANK - OIL RESERVOIR	46090		
STRAINER - OIL	46093		
RESERVOIR HOSE	46113		
PIN - CLEVIS	46123		
FRONT BRAKE HOSE	46201		
REAR BRAKE HOSE	46211		
PIPE - BRAKE	46284		
CONNECTOR	46313		
NP VALVE (LOAD SENSING VALVE)	46400		
PROPORTIONING VALVE	46401		
AUTO ADJUSTING BRAKE PEDAL	46501		
STOPPER ASSY. - PEDAL	46518		
PEDAL - BRAKE	46520		
BUSHING - BRAKE PEDAL	46525		
SHAFT - BRAKE FULCRUM	46560		
SLEEVE - PEDAL SHAFT	46580		
SPRING - BRAKE PEDAL RETURN	46585		
BRAKE BOOSTER ASSY.	47210		
SPACER - BRAKE BOOSTER	47211		
CONTROL ASSY.-BOOSTER	47213		
BRAKE PRESSURE SENSOR ASSY.	47230		
HOSE - BRAKE BOOSTER	47471		
CONNECTOR - BRAKE BOOSTER	47475		
VALVE ASSY. - CHECK	47478		
ACTUATOR ASSY.	47600		
ABS ACTUATOR RELAY	47605		
ACTUATOR BRACKET	47840		
MODULE ASSY.	47850		
ABS/TCS CONTROL UNIT ASSY.	47851		
SENSOR ASSY. (RR) - ANTI-SKID	47900		
SENSOR ASSY. (FR) - ANTI-SKID	47910		
SENSOR - BRAKE STROKE	47920		
DECELERATION SENSOR ASSY.	47930		
STEERING ANGLE SENSOR ASSY.	47945		
ROTOR ASSY. (RR) - SENSOR	47950		
BRACKET - FRONT SENSOR	47960		
ROTOR ASSY. (FR) - SENSOR	47970		
ACCUMULATOR ASSY. - LH,FR	52241		
ACCUMULATOR ASSY. - LH,RR	52242		
ACCUMULATOR ASSY. - RH,FR	52243		
TUBE & HOSE ASSY. - RR ACTR, RH	52503		
TUBE & HOSE ASSY. - RR ACTR, LH	52504		
TUBE & HOSE ASSY. - RR ACTR, FR-A	52505		
TUBE & HOSE ASSY. - RR ACTR, FR-B	52506		
TUBE & HOSE ASSY. - RR ACTR, RR-A	52507		
TUBE & HOSE ASSY. - RR ACTR, RR-B	52508		
TUBE & HOSE ASSY. - HYD SUSP, FR FLOOR	52641		
TUBE & HOSE ASSY. - HYD SUSP, FR FLOOR-LH	52642		
ABS MODULE - SHOCK, FRONT	56100		
ABS MODULE - SHOCK, REAR	56200		
ELECTRICAL			
SWITCH - ASCD SET/CANCEL	18930		
CELL PHONE SWITCH	18931		
INTELLI CRUISE CONTROL UNIT	18995		
HARNASS - MAIN	24010		
HARNASS - ENGINE ROOM	24012		
HARNASS - INSTRUMENT	24013		
HARNASS - BODY	24014		
HARNASS - TAIL	24015		
HARNASS - CHASSIS	24016		
HARNASS - CONSOLE	24030		
HARNASS - ENGINE	24077		
HARNASS - TAILGATE	24145		
HARNASS - ROOM CAMP	24160		
LINK - FUSIBLE	24161		
HARNASS - SUN ROOF	24162		
HARNASS - AIR BAG	24170		
HARNASS - DOOR	24239		
REAR WINDOW DEFROSTER	24320		
DEFROSTER WIRING	24328		
BREAKER - CIRCUIT	24330		
UNIFIED METER CONTROL UNIT	24810		
DIGITAL TEMP METER ASSY.	24835		
COMPASS - TEMP SENSOR	24836		
SPEEDOMETER	24850		

Vehicle Components Covered	PNC	CPO Wrap	CPO Only
TACHOMETER	24855		
GAUGE - FUEL	24860		
ILLUMINATION INVERTER	24871		
ODOMETER/TRIP METER	24875		
GAUGE - WATER TEMPERATURE	24880		
SECURITY INDICATOR LAMP	25021		
SEAT BELT WARNING LAMP	25022		
PLATE - CIRCUIT	25030		
PASS AIRBAG STATUS LAMP	25032		
WARNING DISPLAY LAMP	25040		
DISPLAY - WARNING	25041		
CABLE - SPEEDOMETER	25050		
WARNING DISPLAY AMPLIFIER	25065		
O/HEAD CONSOLE SW MODULE	25111		
LANE DEPARTURE SENSOR SWITCH	25134		
SWITCH - HEAT UP	25144		
VDC OFF SWITCH	25147		
STEERING WHEEL HEATER SWITCH	25148		
SWITCH ASSY.-ECO MODE	25154		
SWITCH ASSY. - COMBINATION (LIGHTING)	25160		
SWITCH ASSY. - AIR CONTROL, SEAT	25175		
PEDAL ADJ SWITCH ASSY.	25180		
HEADLAMP AIMING SWITCH	25188		
RELAY - GLASS HATCH/BACK DOOR	25197		
RELAY - AUDIO AMPLIFIER	25198		
RELAY - COURTESY LAMP	25201		
TAIL GATE RELEASE RELAY	25202		
RELAY - HEADLAMP	25203		
RELAY - DEFROSTER	25204		
RELAY - HORN	25205		
INSTRUMENT PANEL SWITCH	25210		
RELAY - IGNITION & ACCESSORY	25215		
RELAY ASSY. - INHIBITOR	25216		
RELAY - AUTO LAMP	25219		
TRUNK LID OPENER RELAY	25221		
RELAY - HEADLAMP DIMMER	25228		
RELAY - FOG LAMP	25229		
RELAY - POWER WINDOW	25230		
RELAY - A.S.C.D.	25234		
REAR WIPER - RELAY	25236		
RELAY - HICAS	25247		
LAMP CHECK RELAY	25250		
POWER SEAT RELAY	25251		
RELAY - POWER WINDOW	25252		
RELAY - DAYTIME RUNNING LAMP	25253		
RELAY - KEYLESS ENTRY CHECK	25254		
RELAY - KEYLESS ENTRY	25255		
RELAY - THEFT WARNING HORN	25256		
MULTI-REMOTE CONTROL RELAY	25259		
RELAY - ACTIVE SUSPENSION	25260		
REAR WIPER/WASHER SWITCH	25262		
RELAY - ANTI-THEFT	25263		
RELAY - ASCD HOLD	25264		
RELAY - TCS	25265		
CORNERING LAMP RELAY	25266		
RELAY-TAIL LAMP	25268		
RELAY - HEADLAMP DAYTIME	25269		
THEFT WARNING LAMP RELAY	25272		
HID RELAY	25275		
RELAY - N & P	25276		
POWER SOCKET RELAY	25277		
CONTROL - ILLUMINATION	25280		
AUTO-DOOR ON-OFF SWITCH	25290		
BACK DOOR SWITCH	25292		
WALK IN MOTOR RELAY	25293		
AFS RELAY	25295		
TRAILER TOW POWER RELAY	25296		
TRAILER TOW TURN SIGNAL RELAY	25297		
AFS CONTROL UNIT ASSY.	25300		
SWITCH ASSY. - DRIVE POSITION	25315		
SWITCH - ASCD CLUTCH	25323		
SWITCH - STOP (A.S.C.D.)	25324		
SWITCH - MAIN, 120V	25329		
LIGHTER - CIGARETTE	25330		
OUTLET - 120V	25331		
POWER SOCKET ASSY.	25332		
CONTROL ASSY. - INVERTER	25333		
CONTROL UNIT - INVERTER	25334		
SWITCH - REAR WINDOW DEFROSTER	25340		

*Replacement of this assembly must be coded with the PNC of the causal failed part.

ELECTRICAL CONTINUED		CPO Wrap	CPO Only
Vehicle Components Covered	PNC		
POWER REAR WINDOW SWITCH	25343		
SWITCH — DOOR	25360		
SWITCH ASSY. — DOOR LOCK	25361		
SWITCH — BACK DOOR	25363		
SWITCH ASSY. — BACK DOOR UNLOCK	25364		
FOG LAMP SWITCH	25370		
REAR HATCH OPENER SWITCH	25380		
BOARD COMPUTER SWITCH	25381		
TRUNK OPENER SWITCH	25382		
SWITCH — TRUNK LID OPENER	25384		
REAR SUNSHADE SWITCH ASSY.	25388		
SWITCH — DOOR, LOCK/UNLOCK	25400		
SWITCH — INTERLOCK EMERGENCY	25401		
POWER WINDOW CONTROL UNIT	25404		
FUSE BLOCK	25410		
FUSIBLE LINK BOX	25411		
FRT. POWER SEAT SWITCH ASSY.	25490		
SEAT MEMORY SWITCH	25491		
SEAT MEMORY CANCEL SWITCH	25492		
SWITCH — SEAT HEATER	25500		
UNIT — HEADLAMP SENSOR	25505		
TAIL LAMP SENSOR UNIT	25506		
TURN SIGNAL FLASHER UNIT	25520		
HAZARD FLASHER UNIT	25521		
METER POWER UNIT	25522		
SWITCH — HEADLAMP/TURN SIGNAL	25540		
STRONG WHL/CLMN BRUSH ASSY.	25542		
CABLE — SPIRAL	25554		
CONTROL UNIT — AIR BAG	25555		
SIGNAL RECEIVER SWITCH	25556		
FRONT WIPER/WASHER SWITCH	25560		
VOICE WARNING SWITCH	25591		
THEFT WARNING HORN ASSY.	25605		
BUZZER ASSEMBLY	25641		
FRONT SONAR SENSOR BUZZER	25659		
SONAR SENSOR WARNING BUZZER	25660		
SWITCH — GLOVE BOX	25720		
SWITCH — POWER WINDOW	25750		
SWITCH — POWER WINDOW SUB	25752		
SWITCH — HAZARD	25880		
SPEED SENSOR	25911		
A/V MASTER CONTROL UNIT NS	25914		
CARD-SD	25920		
DOOR HANDLE SWITCH	25974		
SONAR SWITCH ASSY.	25989		
BACK-DOOR CONTROL UNIT	25990		
FRONT SONAR SENSOR	25993		
FRONT CONER SONAR SENSOR	25994		
RR CORNER SONAR SENSOR NS	25995		
REAR SONAR SENSOR	25996		
DOOR MIRROR TURN SIGNAL ASSY.	26165		
BULB — ILLUMINATION	26261		
PUDDLE LAMP BULB	26282		
AFS LAMP BULB	26296		
HORN	26310		
LANE DEPARTURE BUZZER ASSY.	26349		
BUZZER CHIME — WARNING	26350		
DIGITAL TOUCH BUZZER	26352		
REAR WIPER BLADE	26360		
BLADE ASSY. — WIPER	26370		
ARM — WIPER	26380		
LAMP ASSY. — ROOM/LUGGAGE ROOM	26410		
LENS — ROOM/LUGGAGE ROOM LAMP	26411		
PERSONAL LAMP ASSY.	26415		
LAMP ASSY. — SPOT	26416		
LAMP ASSY. — STEP	26420		
O/HEAD CONSOLE SPOT LAMP LENS	26429		
RR SIDE WINDOW SWITCH	26430		
LAMP ASSY. — FOOT	26440		
PUDDLE LAMP HOUSING	26442		
LAMP ASSY. — VANITY MIRROR	26450		
HARNNESS — COMBINATION LAMP	26551		
INDICATOR- BSW/BSI	26670		
BULB — STEP LAMP	26734		
BULB — ROOM/LUGGAGE ROOM LAMP	26736		
BULB — SPOT LAMP	26738		
REAR COMBINATION UNIT ASSY.	26760		
CLOCK	27380		
TUBE — TEE	27416		

Vehicle Components Covered	PNC	CPO Wrap	CPO Only
NOZZLE — WASHER	27440		
TUBE ASSY. — WASHER	27460		
REAR WASHER TUBE COMPLETE	27470		
TANK — WASHER	27480		
REAR WASHER TANK	27490		
WASHER TANK LEVEL SENSOR	27491		
CABLE — ANTENNA FEEDER	27531		
TRUNK OPENER CANCEL SWITCH	27662		
ASPIRATOR DUCT	27728		
MOUNTING HARDWARE	27901		
AUX AUDIO SYS CABLE	27946		
TELEPHONE ANTENNA SET	28201		
SMART ENTRANCE DOOR LOCK SWITCH	28242		
SAT ANTENNA ADAPTOR	28243		
ANTENNA FDR-BLUETOOTH	28245		
SAT ANTENNA ADAPTOR	28247		
BODY SONIC CONTROLLER	28251		
FES CONTROL PANEL	28259		
AMBIENCE SWITCH	28261		
REAR VIEW CONTROL ASSY.	28262		
REAR AUDIO PANEL	28269		
REAR DISPLAY FINISHER	28286		
ASSY-MICROPHONE	28301		
RR COMP LAMP MONITOR ASSY.	28312		
VTR JACK	28318		
A-V CONTROL ASSY.	28330		
DISPLAY CONTROL UNIT ASSY.	28332		
MICROPHONE UNIT—TELEPHONE	28336		
VOICE-ACTIVATED CONTROL MODULE	28337		
PHONE ADAPTOR-BLUE TOOTH	28338		
REAR DEFOGGER CONDENSER	28357		
BODY SONIC HARNESS	28378		
PHONE POWER CONTROL UNIT NS	28384		
TV SWITCH ASSY.	28395		
AV/NAVI SWITCH ASSY.	28396		
AV/NAVI SWITCH ASSY.	28397		
VOLUME/TUNING SWITCHES	28398		
ACTIVATOR (A.S.C.D.)	28400		
CONTROLLER (A.S.C.D.)	28402		
SWITCH — MAIN (A.S.C.D.)	28404		
RADAR - SIDE	28405		
POWER WINDOW AMPLIFIER	28410		
IPOD ADAPTER UNIT	28411		
AUX AUDIO SYS CONNECTOR	28413		
HEADLAMP BATT SAVER CONTROL UNIT	28414		
AVM CAMERA CONTROL UNIT	28416		
IPDM/USM MODULE	28417		
SIDE VIEW CAMERA	28419		
CONNECTOR ASSY USB	28423		
SENSOR—STOP/TAIL LAMP	28426		
OIL LEVEL TIMER	28432		
DISTANCE SENSOR ASSY.	28437		
HEADPHONE AMPLIFIER	28438		
REAR VIEW CAMERA ASSY.	28442		
LANE DEPARTURE CAMERA ASSY.	28443		
TIMER — DOOR LOCK	28450		
REAR WINDOW DEFROSTER TIMER	28455		
AVM FRONT VIEW CAMERA	28461		
CONTROL ASSY.-CAN GATEWAY	28481		
MUFFLER CONTROL UNIT ASSY.	28488		
TIMER — AUTO ANTENNA	28490		
BODY CONTROL MODULE	28492		
POWER STEERING CONTROL UNIT	28500		
RELAY — WIPER	28510		
REVERSE LAMP RELAY	28511		
RELAY BRACKET	28512		
THROTTLE MOTOR RELAY	28516		
AIRBAG STATUS LAMP NS	28522		
SONAR SENSOR CONTROL UNIT	28532		
CARD SLOT CONTROL ASSY	28535		
RAIN SENSOR	28536		
CONTROL UNIT - DR MIRROR TURN SIGNAL	28548		
TIME CONTROL UNIT	28550		
SENSOR & DIAGNOSTIC UNIT	28558		
POWER DISTRIBUTION UNIT	28560		
POWER SEAT CONTROL UNIT	28565		
AUTO DRIVE-POS CONTROL UNIT	28567		
RELAY — WIPER	28570		
LIGHTING CONTROL	28575		

Vehicle Components Covered	PNC	CPO Wrap	CPO Only
DAYTIME RUNNING LAMP CONTROL	28576		
LIGHTING SENSOR	28578		
CONTROLLER — THEFT WARNING	28591		
CONTROLLER — SUB THEFT WARNING	28592		
RELAY — THEFT WARNING	28593		
SMART ENTRANCE CONTROL UNIT	28594		
DIGITAL TOUCH CONTROL UNIT	28595		
KEYLESS ENTRY CONTROL ASSY.	28597		
REMOTE DOOR LOCK CONTROL UNIT	28600		
VEHICLE IMMOBILIZER CONTROL UNIT	28601		
VEHICLE IMMOBILIZER WIRING HAR. ASSY.	28604		
THEFT WARNING HORN ASSY.	28605		
VEHICLE IMMOBILIZER ANTENNA ASSY.	28607		
REAR WIPER MOTOR	28710		
SWITCH — GLOVE BOX	28720		
MOTOR — WASHER	28765		
REAR WASHER MOTOR	28766		
MOTOR — WIPER	28810		
INTERMITTENT WIPER AMPLIFIER	28820		
ARM — WIPER MOTOR	28840		
ROD — WIPER CONNECTING	28860		
PIVOT ASSY.	28870		
WASHER TANK INLET NS	28916		
SENSOR — A.S.C.D. SPEED	28940		
MAIN BATTERY CURRENT SENSOR	29400		
IGNITION KEY LAMP ASSY.	48476		
IGNITION SWITCH ASSY.	48750		
SWITCH — HOOD	65630		
REAR WINDOW ANTENNA	79723		
ACTUATOR — DOOR LOCK	80550		
DOOR HANDLE SWITCH	80607		
MOTOR — FRONT WINDOW REGULATOR	80730		
MOTOR — REAR REGULATOR	82730		
AIR BAG PRESSURE DETECT MODULE	86509		
MOTOR ASSY.-SLIDE	86911		
FRONT POWER SEAT HARNESS	87019		
SIDE AIR BAG HARNESS	87020		
SEAT HEATER ELEMENT/THERMOSTAT	87345		
SLIDE, LIFT SWITCH	87352		
BACK DOOR OPENER ACTUATOR	90550		
BACK DOOR CLOSURE MOTOR	90554		
TRUNK/BACK DOOR INTELL KEY SWITCH	90605		
ASCD VACUUM TANK	92260		
PUMP — VACUUM A.S.C.D.	92270		
ASCD VACUUM TANK	92660		
DOOR MIRROR CONTROL UNIT	96312		
ASSIST AIR BAG MODULE	98515		
MODULE — AIR BAG	98520		
CURTAIN AIR BAG MODULE	98521		
SENSOR — AIR BAG	98581		
PEDAL POSITION CONTROL UNIT	98700		
SIDE AIR BAG MODULE	98830		
SIDE AIR BAG SIDE SENSOR	98831		
AIR BAG ON/OFF SWITCH ASSY	98840		
AIR BAG ON/OFF SWITCH HARNESS	98841		
SEAT BELT CONTROL UNIT ASSY	98845		
SATELLITE RADIO	AA025		
HEATER & AIR CONDITIONING			
BRACKET — COMPRESSOR	11910		
BELT — COMPRESSOR	11920		
A/C COMP IDLER PULLEY	11924		
BRACKET — IDLER PULLEY	11926		
REAR HEATER RELAY	25207		
RELAY — BLOWER MOTOR	25208		
RELAY — AIR CONDITIONER	25218		
RELAY-REAR AIR CONDITIONER	25225		
RELAY — AIR CONDITIONER	25246		
RELAY — MAX COLD DOOR	25257		
REAR - HEATER RELAY	25274		
REAR HEATER CONTROL FRONT	25307		
UNIT — HEATER	27000		
REAR HEATER CORE	27013		
REAR HEATER MOTOR	27014		
CONTROL — AIR COND.	27030		
VALVE ASSY. — VACUUM SELECTOR	27031		
CONTROL ASSY. — AUTO AIR CONDITIONER	27032		
REAR HEATER UNIT	27035		
A/C HARNESS	27038		
SWITCH ASSY. — FAN	27041		

ELECTRICAL CONTINUED		CPO Wrap	CPO Only
Vehicle Components Covered	PNC		
CASE – BLOWER	27065		
FAN & MOTOR	27070		
HEATER CONNECTOR	27071		
HEATER SWITCH REGISTER	27077		
ACTUATOR – VACUUM	27080		
VACUUM WATER COCK	27090		
HEATER CORE	27115		
HEATER COCK	27116		
GAS SENSOR ASSY.	27118		
CABLE – AIR COND. CONTROL	27134		
MODE DOOR ACTUATOR	27141		
DUCT – CENTER DEFROSTER	27151		
SIDE DEFROSTER DUCT	27152		
DEFROSTER HOSE	27164		
NOZZLE – FLOOR	27167		
DUCT – HEATER	27173		
REAR A/C DUCTING COMPONENTS	27175		
REAR HEATER RESISTOR	27178		
HOSE – HEATER	27181		
HEATER TUBE	27185		
THERMISTOR	27322		
THERMO CONTROL AMPLIFIER	27330		
BLOWER MOTOR ASSY.	27375		
BLOWER IMPELLER	27383		
REAR COOLING UNIT	27405		
REAR EVAPORATOR ASSY.	27410		
RR A/C-HIGH TUBE	27413		
RR A/C-LOW TUBE	27414		
REAR COOLER CASE ASSY.	27415		
AIR PURIFIER CASE	27461		
AIR PURIFIER ASSY.	27492		
FRESH AIR VENT SWITCH ASSY.	27513		
HOSE – DRAIN	27619		
EVAPORATOR ASSY.	27621		
SWITCH-HIGH PRESSURE	27623		
VALVE – EXPANSION	27625		
COMPRESSOR ASSY.	27630		
AMPLIFIER - BLOWER CONTROL	27631		
RECEIVER/DRYER	27640		
SWITCH – LOW PRESSURE	27648		
CONDENSER	27650		
MOTOR – CONDENSER FAN	27651		
FAST IDLE DIAPHRAGM	27655		
REAR A/C FAN SWITCH ASSY.	27665		
DUCT – SIDE VENTILATOR	27670		
PIPE COOLER	27677		
CONNECTOR – JOINT	27680		
SENSOR – SOLAR	27705		
VACUUM CONTROL HOSE	27711		
AMPLIFIER – FAN CONTROL	27717		
SENSOR – INTAKE	27723		
ASPIRATOR	27726		
SENSOR – IN-VEHICLE	27727		
SEAL – A/C COMPRESSOR SHAFT	27730		
SWITCH – COOLANT TEMPERATURE	27732		
ACTUATOR ASSY.-AIR MIX DOOR	27740		
MAGNETIC CLUTCH ASSY.	27742		
RING – SNAP	27744		
DEFROSTER DOOR ACTUATOR	27747		
L/H-SIDE AIR MIX DORR ACTUATOR	27748		
ASPIRATOR FAN	27752		
SENSOR ASSY. – AMBIENT	27755		
AMBIENT AIR TEMP SENSOR	27757		
HEATER DUCT	27830		
REAR FLOOR HEATER DUCT	27832		
CENTER DUCT	27850		
VENTILATOR – CENTER	27860		
VENT DOOR/DUCT	27923		
FLOOR REAR HEAT/AC DUCT–FRONT PIECE	27930		
FLOOR REAR HEAT/AC DUCT–REAR PIECE	27931		
REAR FLOOR HEATER DUCT	27932		
AIR PURIFIER GRILLE ASSY.	27945		
DUCT – HEATER REAR	27950		
AMBIENCE UNIT	27972		
CONDENSER	27984		
AUTO AIR CONTROL AMPLIFIER	28520		
VALVE-EXPANSION	92200		
PIPE - COOLER	92460		
PIPE ASSY. - REAR COOLER, HIGH C	92462		

Vehicle Components Covered		PNC	CPO Wrap	CPO Only
FLEXIBLE HOSE – LOW PRESSURE	92480			
FLEXIBLE HOSE – HIGH PRESSURE	92490			
ENGINE				
ELECTRICAL FUEL INJECTION/ECC				
SENSOR – EXHAUST GAS TEMP.	14730			
VALVE – B.P.T.(BACK PRES. TRANSDUCER)	14741			
EAI UNIT	14810			
EAI PIPE	14823			
AB VALVE	14835			
AIR INDUCTION HOSE	14860			
SERVICE PORT – EVAP	14939			
VALVE – E.G.R. SOLENOID	14954			
VALVE – A/V CONTROL SOLENOID	14956			
INJECTOR – FUEL	16603			
MODULE – FUEL PUMP CONTROL	17001			
CHAMBER – THROTTLE, EFI/ECCS	17118			
DETONATION SENSOR	22060			
VIASVENT HOSE	22320			
POWER VALVE VACUUM TANK	22327			
UNIT – EFI CONTROL	22611			
SWITCH – THROTTLE VALVE	22620			
SENSOR – WATER TEMP.	22630			
SENSOR – CYLINDER ALTITUDE	22632			
REGULATOR – AIR	22660			
REGULATOR – PRESSURE	22670			
METER – AIR FLOW	22680			
BRACKET – AIR FLOW METER	22682			
AIR/FUEL RATIO SENSOR	22689			
RESISTOR – DROPPING	22695			
RELAY – ECC/EFI	22696			
RELAY – FUEL PUMP	22697			
FUEL DROPPING RESISTOR	22698			
SENSOR – CRANK ANGLE	23730			
CRANKSHAFT POSITION SENSOR (OBD POS)	23731			
CRANKSHAFT POSITION SENSOR (REF)	23732			
RING GEAR SENSOR ASSY.	23733			
INT VALVE TIMING CONT POS SENSOR	23734			
VALVE – A.A.C.	23781			
HARNNESS/SUBHARNNESS – EFI	24011			
EMISSION CONTROL SYSTEMS				
TUBE – E.G.R.	14120			
VALVE – E.G.R. CONTROL	14710			
E.G.R. PASSAGE	14711			
TUBE – VACUUM	14729			
PURGE CONTROL VALVE	14930			
EVAP CAN PRGE VOL CONT SOL VLV	14931			
PURGE CONTROL SOLENOID	14932			
EVAP PURGE RESONATOR	14934			
DRAIN CUT VALVE ASSY.	14936			
VAPOR CANISTER ASSY.	14949			
PURGE CUT VALVE	14963			
WATER TEMPERATURE SWITCH	22120			
SWITCH – CANNISTER CONTROL VACUUM CK	22360			
EX GAS SENSOR HOLD RELAY	25226			
ENGINE ELECTRICAL				
ALTERNATOR BRACKET	11710			
ALTERNATOR ADJUSTING BAR	11715			
SWIRL CONTROL VALVE	14517			
THERMO ELEMENT KIT	16391			
AIR INTAKE GUIDE	21469			
UNIT – TRANSISTOR IGN.	22020			
DISTRIBUTOR ASSY.	22100			
ROTOR HEAD	22157			
HARNNESS – DISTRIBUTOR	22159			
CAP ASSY.	22162			
STATOR	22163			
PROTECTOR – DISTRIBUTOR	22172			
ABSOLUTE PRESSURE SENSOR	22366			
COIL – IGNITION	22433			
CABLE – HIGH TENSION (IGN. COIL TO DIST.)	22450			
RESISTOR	22460			
PROTECTOR – IGNITION COIL	22465			
ALTERNATOR ASSY.	23100			
ROTOR – ALTERNATOR	23108			
BEARING – ALTERNATOR	23120			
HOLDER & BRUSH	23133			

Vehicle Components Covered		PNC	CPO Wrap	CPO Only
PULLEY ASSY.	23150			
REGULATOR – IC TYPE VOLTAGE	23215			
DIODE SET	23230			
MOTOR ASSY. – STARTER	23300			
COIL ASSY. – FIELD	23306			
ARMATURE ASSY.	23310			
PINION ASSY. – CLUTCH	23312			
GEAR – REDUCTION	23313			
SWITCH ASSY. – MAGNETIC	23343			
BRUSH	23380			
HYBRID VEH CONTROL (ECU)	23700			
THROTTLE CONTROL UNIT – TCS	23799			
ENGINE SUB HARNNESS	24070			
RELAY – ALT. “L”	24336			
HEV BATTERY	24411			
TRAY – BATTERY	24428			
ENGINE START SWITCH ASSY.	25150			
THROTTLE MOTOR RELAY	25171			
RELAY – STARTER	25243			
INVERTER (PCU)	29100			
INVERTER ASSY	29111			
CONVERTER ASSY	29210			
BATTERY CONTROL ASSY	29310			
JUNCTION BOX ASSY	29410			
POWER HEAD BRACKET	29433			
BATTERY COOLING FAN	29500			
BATTERY SENSOR ASSY	29502			
MAIN, B BATTERY SUB ASSY	29509			
HARNNESS BATTERY FRONT PROTECT	29516			
SERVICE DISCONNECT SW	29701			
BATTERY UPPER COOLING DUCT	29714			
BATTERY LOWER COOLING DUCT	29715			
BATTERY SIDE COOLING DUCT	29716			
BODY SIDE BATTERY CLNG DUCT	29717			
TRANSAXLE & MOTOR GENERATOR	31021			
ACTUATOR ASSY. – TCS	41810			
PUMP ASSY. – TCS	41830			
RESERVOIR TANK – TCS	41871			
CONTROL UNIT ASSY. – TCS	47860			
ENGINE MECHANICAL				
ENGINE – BARE*	10102			
SHORT ENGINE ASSY.*	10103			
BLOCK – CYLINDER	11010			
CYLINDER BLOCK WELCH PLUG	11021			
PLUG GASKET	11026			
HEAD ASSY. – CYLINDER	11041			
GASKET – CYLINDER HEAD	11044			
COVER – CYLINDER HEAD FRONT/REAR	11046			
CYLINDER HEAD WELCH PLUG	11051			
BOLT – CYLINDER HEAD	11056			
SPARK PLUG TUBE	11095			
SEAT – INTAKE VALVE	11098			
SEAT – EXHAUST VALVE	11099			
PAN – OIL	11110			
COVER – OIL PAN BOTTOM	11115			
GASKET – OIL PAN	11121			
PLUG – OIL PAN DRAIN	11128			
GAUGE – OIL LEVEL	11140			
RH ENG MOUNT INSULATOR	11175			
LH ENG MOUNT INSULATOR	11215			
INSULATOR – ENGINE MOUNT, FRONT	11220			
RH ENG MOUNT BRACKET	11229			
BRACKET – ENGINE MOUNT, FRONT	11232			
CENTER MEMBER	11240			
ENGINE DAMPER ASSY.	11246			
GUSSET	11262			
ENG MOUNT ACTUATOR ASSY.	11273			
INSULATOR – ENGINE MOUNT, REAR	11320			
BRACKET – ENGINE MOUNT, REAR	11340			
LH ENG MOUNT BRACKET	11355			
BUFFER	11390			
DRIVE BELT	11720			
BELT – TIMING	11721			
SERPENTINE BELT TENSIONER	11750			
SERPENTINE BELT TENSIONER BRKT	11972			
PISTON & PIN	12010			
RING – PISTON	12033			

ENGINE CONTINUED		CPO Wrap	CPO Only
Vehicle Components Covered	PNC		
ROD & CAP — CONNECTING	12100		
BEARING — CONNECTING ROD	12111		
PISTON OIL JET	12121		
CRANKSHAFT	12200		
BEARING — MAIN	12207		
SEAL — CRANKSHAFT OIL	12279		
PULLEY — CRANKSHAFT	12303		
BOLT — FIXING (CRANK PULLEY)	12309		
FLYWHEEL ASSY.	12310		
FLYWHEEL RING GEAR	12312		
CAMSHAFT	13001		
GEAR — CRANKSHAFT	13021		
GEAR — CAMSHAFT	13024		
VTC SPROCKET ASSY.	13025		
CHAIN — TIMING	13028		
COVER — ENGINE FRONT	13035		
VTC CIVER ASSY.	13041		
SEAL — OIL, CRANKSHAFT FRONT/REAR	13042		
SEAL — CAMSHAFT OIL	13043		
GASKET — DUST COVER	13044		
WL LADDER ASSY.	13045		
LIFTER GUIDE	13051		
TENSIONER — CHAIN	13070		
JET — TIMING CHAIN OIL	13081		
GUIDE — CHAIN TENSIONER SIDE	13085		
VALVE — INTAKE	13201		
VALVE — EXHAUST	13202		
VALVE — SPRING	13203		
SEAT — VALVE SPRING	13205		
SEAT — VALVE OIL	13207		
RETAINER — VALVE SPRING	13209		
GUIDE — VALVE	13212		
SHIM — VALVE	13229		
LIFTER — VALVE (OHV ENGINE ONLY)	13231		
VALVE ROCKER PIVOT	13234		
SHAFT — ROCKER	13252		
ARM — VALVE ROCKER	13257		
COVER ASSY. — VALVE ROCKER	13264		
GASKET — VALVE ROCKER COVER	13270		
TIMING CHAIN REAR COVER	13500		
GASKET — FRONT/REAR COVER	13520		
COVER — FRONT DUST	13560		
STRAINER — OIL	15050		
TUBE — DIPSTICK	15155		
CAP — OIL FILLER	15255		
PULLEY ASSY. — TENSION	16805		
VVL ACTUATOR ASSY.	23745		
SOLENOID ASSY. — VTC	23796		
FUEL SYSTEM			
SCV SOLENOID VALVE	14951		
VACUUM DELAY VALVE	14958		
SCV CONTROL VAC SOLENOID VALVE	14967		
VIAS CONTROL SOLENOID VALVE ASSY.	14968		
IAS UNIT	16250		
FUEL STRAINER ASSY.	16400		
PRIMARY FUEL FILTER	16402		
FUEL STRAINER UPPER COVER	16404		
INJECTOR HOSE	16409		
FUEL RAIL CROSSOVER TUBE	16441		
DUCT — HOT AIR	16530		
AIR TEMPERATURE SENSOR	16580		
RESONATOR	16585		
COVER — EXHAUST MANIFOLD	16590		
FUEL PRESSURE SENSOR	16637		
PUMP ASSY. — ELECTRIC FUEL	17012		
FUEL CONNECTOR	17103		
TANK — FUEL	17201		
HOSE/TUBE FUEL FILLER	17220		
NECK FUEL FILLER	17222		
CAP — FUEL FILLER	17251		
FUEL HOSE PROTECTOR	17271		
FUEL TANK FILTER	17275		
FUEL TANK PROTECTOR	17285		
HOSE — VENTILATION	17325		
VALVE — FUEL CHECK	17330		
VENTILATION HOSE	17333		
VENTILATION HOSE	17337		

ENGINE		CPO Wrap	CPO Only
Vehicle Components Covered	PNC		
RING — O, FUEL GAUGE	17342		
BREATHER VALVE	17368		
VACUUM CUT-OFF VALVE	17372		
TUBE — FUEL OUTLET (TANK TO STRAINER)	17501		
TUBE — AIR SUPPLIER	17508		
TUBE — FUEL RETURN	17510		
TUBE ASSY. — FRONT FUEL	17520		
HIGH PRESSURE FUEL TUBE ASSY	17522		
RETURN HOSE	17551		
FUEL OUTLET HOSE	17565		
FUEL TUBE PROTECTOR	17576		
AUTO-ADJUST ACCEL PEDAL	18002		
ARM — ACCELERATOR PEDAL	18010		
BRACKET ASSY. — ACCELERATOR PEDAL	18021		
ACCELERATOR PEDAL	18110		
WIRE — ACCELERATOR	18150		
ACCELERATOR STOPPER COVER	18158		
SPRING — RETURN	18215		
WATER SEPARATOR	18795		
GASKET — FRONT TUBE	20711		
VIASVALVE VACUUM TANK	22328		
SENSOR ASSY. - PRESSURE	22368		
FUEL TEMPERATURE SENSOR	22629		
INTAKE AIR TEMP SENSOR	22631		
SENSOR — TANK FUEL TEMPERATURE	22634		
FUEL DAMPER	22675		
FUEL HOSE DAMPER ASSY.	22676		
VEL CONTROL MODULE	23751		
UNIT — FUEL LEVEL SENDING	25060		
EVAP. CONTROL SYSTEM PRESSURE SENSOR	25086		
DUCT — FRESH AIR	62860		
INTAKE/EXHAUST MANIFOLDS			
FUEL DAMPER ASSY.	11300		
VALVE — P.C.V.	11810		
VENTILATION HOSE	11828		
MANIFOLD — INTAKE	14001		
MANIFOLD — EXHAUST	14004		
CAP BOLT & STUD	14006		
LOWER MANIFOLD COLLECTOR	14011		
EXHAUST MANIFOLD CONNECTOR	14012		
COLLECTOR — INTAKE MANIFOLD	14013		
SUPPORT — INTAKE MANIFOLD	14018		
GASKET — MANIFOLD	14035		
INTAKE ADAPTER	14040		
INTAKE MANIFOLD COLLECTOR ORNAMENT	14041		
GASKET — COLLECTOR	14080		
HEAT SHROUD	14096		
TUBE & HOSE — INLET	14460		
FRONT TUBE	20010		
FRONT EXHAUST TUBE "B"	20011		
EXHAUST ACTUATOR ASSY.	20130		
EXHAUST ACTUATOR CONNECTOR	20132		
FRONT TUBE INSULATOR	20510		
CENTER TUBE INSULATOR	20520		
MUFFLER LOWER HEAT INSULATOR	20540		
CONVERTER GASKET	20712		
EXHAUST MOUNTING ASSY	20713		
CATALYTIC CONVERTER	20800		
EXHAUST MANIFOLD W/CATALYTIC CNVTR	20801		
SENSOR — FRONT EXHAUST GAS (02)	22690		
SENSOR — REAR EXHAUST GAS (02)	22691		
LUBRICATION & COOLING SYSTEM			
OUTLET — WATER	11060		
HOUSING — THERMOSTAT	11061		
WATER OUTLET GASKET	11062		
CYLINDER BLOCK WATER OUTLET	11063		
GASKET — THERMOSTAT HOUSING	11072		
DRIVE BELT TENSIONER	11716		
P/S PUMP BELT TENSIONER	11717		
INLET — WATER	13049		
OIL PUMP CHAIN TENSIONER	13054		
WATER CONNECTOR	14054		
WATER BY-PASS HOSE	14055		
THROTTLE BODY WATER HOSE	14083		
EXHAUST MANIFOLD COVER	14091		
VIAS CONTROL VALVE ASSY.	14518		

ENGINE		CPO Wrap	CPO Only
Vehicle Components Covered	PNC		
VALVE — "VACUUM CUT VALVE" BYPASS	14933		
VALVE — EVAP. CANISTER VENT CONTROL	14935		
CANISTER — CARBON	14950		
VALVE — MAP/BARO SWITCH SOLENOID	14962		
PUMP ASSY. — OIL	15010		
GASKET — OIL PUMP	15025		
CHAIN — OIL PUMP DRIVE	15041		
GEAR — OIL PUMP CRANK	15043		
GEAR — OIL PUMP DRIVE	15044		
GASKET — OIL PUMP CHAIN	15073		
GUIDE — LOWER OIL PUMP CHAIN	15074		
VALVE — OIL PUMP REGULATOR	15132		
BRACKET — OIL FILTER	15238		
GASKET — OIL FILTER BRACKET	15239		
VALVE — UNIT RELIEF	15241		
VALVE — OIL FILTER REGULATOR	15300		
TERMINAL — ACCELERATOR WIRE	16361		
WIRE — THROTTLE (PUMP TO TERMINAL)	16362		
CLEANER ASSY. — AIR	16500		
GASKET & AIR CLEANER INSULATOR	16523		
OIL TEMP SENSOR	16970		
PUMP ASSY. — WATER	21010		
GASKET — WATER PUMP	21014		
FAN PULLEY BRACKET	21046		
PULLEY — FAN & WATER PUMP	21051		
COOLING FAN DRIVE PUMP	21052		
BLADE — FAN	21060		
COUPLING ASSY. — FAN	21082		
THERMOSTAT	21200		
OIL COOLER PIPE/HOSE - FIN TYPE	21302		
ENGINE OIL COOLER ASSY. - FIN TYPE	21305		
FAN OIL COOLER ASSY.	21309		
ENG OIL COOLER GASKET	21310		
OIL COOLER WATER HOSE	21380		
RADIATOR ASSY.	21400		
CAP — RADIATOR	21430		
AIR INTAKE GUIDE	21468		
SHROUD ASSY. — RADIATOR	21475		
COCK — RADIATOR DRAIN	21480		
FAN CONTROL MODULE	21493		
UPPER RADIATOR HOSE	21501		
LOWER RADIATOR HOSE	21503		
TANK — RESERVOIR	21510		
BRACKET — RESERVOIR TANK	21511		
RESERVOIR TANK HOSE	21515		
SWITCH — WATER TEMP (FOR COOLING FAN)	21595		
RADIATOR FAN MOTOR	21597		
A/T OIL COOLER PIPING	21636		
FAN OIL COOLER HOSE ASSY.	21637		
UNIT — WATER TEMPERATURE GAUGE	25080		
RELAY — RADIATOR COOLING FAN	25217		
OIL PRESSURE SENDING UNIT	25240		
SWITCH — OIL PRESSURE (WITHOUT GAUGE)	25244		
COOLING FAN CONTROLLER	25305		
COOLING FAN SPEED CONTROL SOLENOID VALVE	25405		
FRONT/REAR SUSPENSION			
SWITCH — HEIGHT CONTROL	25105		
SWITCH — ADJ./SONAR SUSPENSION	25140		
UNIT — CONTROL ADJ./SONAR SUSPENSION	25963		
SONAR ROAD SENSOR	25965		
NOISE SUPPRESSOR COIL	28363		
SENSOR — STEERING ANGLE	28476		
AIR SUSPENSION CONTROL ASSY.	28581		
INCLINE ANGLE SENSOR ASSY.	31955		
BRACKET — CENTER BEARING	37519		
BEARING — CENTER	37520		
SHAFT ASSY. — REAR AXLE	38162		
NUT — REAR AXLE SHAFT LOCK	38163		
FRONT DRIVE FLANGE	38512		
4WD FRONT DRIVE SHAFT	38519		
FRONT DRIVE SHAFT ASSY.	39100		
DUST SHIELD	39252		
SHAFT ASSY. — DRIVE	39600		
RACE — SPIDER ASSY. W/ BRG (DIFF. SIDE)	39625		
BOOT — RUBBER	39655		
SLIDE JOINT HOUSING	39714		
SLIDE JOINT SPIDER ASSY.	39720		
SPINDLE — KNUCKLE	40014		

Vehicle Components Covered	PNC	CPO Wrap	CPO Only
PIN – KING	40022	■	■
BEARING – KING PIN	40030	■	■
BOLT – STEERING STOPPER	40038	■	■
ARM – KNUCKLE	40052	■	■
BOOT – DRIVE SHAFT	40088	■	■
UPPER BALL JOINT	40110	■	■
BALL JOINT	40160	■	■
SEAT – LOWER BALL JOINT	40173	■	■
HUB – FRONT ROAD WHEEL	40202	■	■
4WD DRIVE SHAFT BEARING	40213	■	■
BEARING	40215	■	■
BOLT – FRONT HUB	40222	■	■
SIDE SHAFT GREASE SEAL	40227	■	■
FRONT BEARING DUST SEAL	40228	■	■
SEAL – GREASE	40232	■	■
NUT – LOCK	40262	■	■
REAR AXLE HOUSING	43010	■	■
HOUSING – REAR AXLE (MULTI-LINK)	43018	■	■
BUSHING ASSY. – AXLE HOUSING	43052	■	■
HUB – REAR WHEEL	43204	■	■
FLANGE – REAR AXLE COMPANION	43213	■	■
BEARING – REAR AXLE	43215	■	■
BOLT – REAR HUB	43222	■	■
SEAL – GREASE, REAR HUB	43232	■	■
SEAL – REAR AXLE SHAFT OIL	43252	■	■
LOCK NUT	43262	■	■
ACTUATOR ASSY. – CONTROL	52102	■	■
JOINT ASSY. – FRONT	52110	■	■
FILTER ASSY. – AIR FRONT	52140	■	■
SEAT – INSULATOR CAP	52147	■	■
CLIP – INSULATOR CAP	52149	■	■
ACTUATOR ASSY. – REAR	52152	■	■
JOINT ASSY. – REAR	52160	■	■
SEAT – REAR JOINT	52162	■	■
VALVE COMPL. – FRONT CONTROL	52200	■	■
ACCUMULATOR ASSY. – FRONT	52240	■	■
VALVE COMPL. – REAR CONTROL	52250	■	■
ACCUMULATOR ASSY. – REAR	52290	■	■
VALVE ASSY. – MULTI	52300	■	■
FILTER COMPL. – DRAIN	52360	■	■
TANK ASSY. – OIL	52400	■	■
COOLER ASSY. – OIL	52421	■	■
MOTOR FAN	52431	■	■
ACCUMULATOR – PUMP	52470	■	■
TUBE & HOSE – FRONT ACTUATOR	52500	■	■
TUBE ASSY. – REAR ACTUATOR	52502	■	■
TUBE – DRAIN FRONT	52541	■	■
TUBE – DRAIN REAR	52543	■	■
TUBE & HOSE – FRONT CROSS	52600	■	■
TUBE ASSY. – ACTIVE SUSP. FRONT	52640	■	■
TUBE & HOSE – ACTIVE SUSP. R. FLOOR	52650	■	■
CONTROL ASSY. – ACTIVE SUSP. FRONT	52700	■	■
AIR COMPRESSOR ASSY.	53400	■	■
REAR "B" TANK TUBE ASSY.	53530	■	■
REAR "A" TANK TUBE ASSY.	53546	■	■
HEIGHT SENSOR ASSY.	53810	■	■
SENSOR ROD ASSY.	53820	■	■
SPRING – FRONT COIL/TORSION-BAR	54010	■	■
SEAT – SPRING	54036	■	■
BUMPER – BOUND	54050	■	■
REBOUND BUMPER	54053	■	■
COVER – DUST, STRUT	54055	■	■
SEAL – DUST, STRUT	54059	■	■
TORQUE ARM	54080	■	■
ANCHOR ARM	54210	■	■
ANCHOR ADJUSTING BOLT & NUT	54216	■	■
STRUT ASSY.	54302	■	■
PACKING – GLAND	54308	■	■
INSULATOR – STRUT	54320	■	■
BEARING – STRUT	54325	■	■
REBOUND STOP	54342	■	■
ROD ASSY. – CONNECTING SENSOR	54372	■	■
SUB-HARNESS – ADJ. SHOCK ABSORBER	54390	■	■
MEMBER – FRONT SUSPENSION	54401	■	■
TOWER BAR ASSY.(BRACE BETWEEN FT.STRUTTWRS.)	54412	■	■
BRACKET–R/H TOWER BAR	54413	■	■
BRACKET–L/H TOWER BAR	54414	■	■
SPINDLE – LOWER LINK	54419	■	■
FRONT CROSS BAR ASSY.(BETWEEN LOWER SUSP. ARMS)	54424	■	■

Vehicle Components Covered	PNC	CPO Wrap	CPO Only
FRONT SUSPENSION STAY	54466	■	■
ROD – TENSION	54470	■	■
BUSHING – TENSION ROD	54476	■	■
BRACKET – TENSION ROD	54480	■	■
BUSHING	54504	■	■
UPPER LINK BUSHING	54507	■	■
LINK ASSY. – FRONT SUSPENSION UPPER	54524	■	■
BRACKET – FRONT SUSPENSION UPPER	54527	■	■
LINK – TRANSVERSE LOWER	54529	■	■
UPPER LINK	54533	■	■
UPPER LINK SPINDLE	54536	■	■
EXTENSION – KNUCKLE STEERING	54590	■	■
STABILIZER – FRONT	54611	■	■
BRACKET & BUSHING	54614	■	■
BUSH. ASSY. – STABILIZING CONNECT. ROD	54618	■	■
ROD – RR STABILIZER CONNECTING	54619	■	■
CONN ROD ASSY. BRACKET ASSY.	54650	■	■
BRACKET – LOWER LINK	55015	■	■
LINK ASSY. – LOWER	55019	■	■
SPRING – LEAF/COIL	55020	■	■
UPPER LINK ASSY.	55023	■	■
PARALLEL ROD	55024	■	■
SEAT – SPRING	55036	■	■
BUSHING ASSY. – SUSPENSION ARM	55045	■	■
LOWER LINK BUSHING & BOLT	55047	■	■
UPPER LINK BUSHING & BOLT	55048	■	■
SILENCER-SPRING	55090	■	■
RADIUS ROD LINK	55110	■	■
FRONT LOWER LINK ASSY.	55111	■	■
REAR SUSPENSION UPPER ARM	55120	■	■
LINK ASSY. – RR SUSPENSION UPPER, FRONT	55121	■	■
REAR SUSPENSION CONTROL ROD	55122	■	■
PANHARD ROD ASSY.	55130	■	■
LINK ASSY. – RR SUSPENSION UPPER, REAR	55131	■	■
BUSHING – PANHARD ROD	55135	■	■
BOLT – SUSPENSION ARM	55226	■	■
BUMPER – BOUND	55240	■	■
STRUT BOUND BUMPER	55241	■	■
LOWER LINK BRACKET	55252	■	■
UPPER LINK BRACKET	55270	■	■
REAR STRUT ASSY.	55302	■	■
INSULATOR – MOUNTING	55320	■	■
MEMBER – REAR SUSPENSION	55401	■	■
REAR TOWER BAR ASSY.	55412	■	■
REAR TOWER BAR BRACKET, R.H./L.H.	55416	■	■
REAR CROSS BAR ASSY.	55422	■	■
STAY – RR SUSPENSION MEMBER	55451	■	■
INSULATOR ASSY. – SUSP. MEMBER MTG.	55466	■	■
BRACKET ASSY. – DIFFERENTIAL MOUNTING	55471	■	■
BRACKET – PARALLEL ROD	55480	■	■
DIFF MOUNTING INSULATORS	55484	■	■
DYNAMIC DAMPER ASSY.	55490	■	■
BAR – REAR SUSPENSION	55495	■	■
REAR AXLE TORSION BEAM ASSY.	55500	■	■
ARM ASSY. – SUSPENSION	55501	■	■
PARALLEL ROD BOLT	55524	■	■
REAR SUSPENSION ARM PROTECTOR	55527	■	■
STAY – SPRING SEAT	55545	■	■
BUSHING	55743	■	■
STABILIZER – REAR	56230	■	■
BUSHING – CONNECTING ROD	56231	■	■
BRACKET – RR STABILIZER	56233	■	■
REAR STABILIZER USHING	56235	■	■
BUSHING & MOUNTING BRACKET STABILIZER	56243	■	■
G SENSOR ASSY.	98805	■	■
POWER TRAIN			
PROPELLER SHAFT(S) / DIFFERENTIAL			
DIFFERENTIAL LOCK UNIT	28496	■	■
4WD DRAIN PLUG	32104	■	■
SHAFT – PROPELLER	37000	■	■
CENTER BEARING BRACKET	37010	■	■
BRACKET – CENTER BEARING	37511	■	■
BEARING – CENTER	37521	■	■
INSULATOR – CENTER BEARING	37522	■	■
HYPOID GEAR & PINION SET	38100	■	■
BOLT – DRIVE GEAR	38102	■	■
BEARING – PINION REAR	38120	■	■
BEARING – PINION FRONT	38140	■	■

Vehicle Components Covered	PNC	CPO Wrap	CPO Only
SPACER – PINION BEARING	38165	■	■
SPACER – PINION PILOT BEARING	38169	■	■
SEAL – OIL, DRIVE PINION	38189	■	■
FLANGE – COMPANION	38210	■	■
FLANGE – SIDE	38220	■	■
FLANGE – 4WD SIDE	38221	■	■
DIFFERENTIAL SIDE SHAFT ASSY.	38230	■	■
DIFF SIDE SHAFT ASSY.	38231	■	■
EXTENSION TUBE RETAINER	38232	■	■
DIFFERENTIAL SIDE BEARING ASSY.	38242	■	■
FINAL DRIVE ASSY.	38300	■	■
HOUSING – FINAL DRIVE	38310	■	■
CARRIER – 4WD GEAR	38311	■	■
GASKET – REAR COVER	38320	■	■
BEARING – PILOT	38335	■	■
RETAINER – 4WD SIDE BEARING	38341	■	■
SEAL – OIL, SIDE	38342	■	■
SIDE RETAINER O-RING SEAL	38343	■	■
OIL SEAL – 4WD DIFF. SIDE	38344	■	■
O-RING – 4WD SIDE RETAINER	38345	■	■
AXLE TUBE O-RING SEAL	38346	■	■
SIDE O-RING SEAL	38347	■	■
COVER – REAR FINAL DRIVE	38351	■	■
BREATHER & HOSE – DIFFERENTIAL	38352	■	■
BREATHER – 4WD	38353	■	■
BREATHER HOSE	38354	■	■
DRAIN PLUG	38355	■	■
REAR COVER GASKET	38420	■	■
CASE – DIFF.	38421	■	■
GEAR – SIDE, DIFF. BEVEL	38423	■	■
WASHER – THRUST, SIDE GEAR	38424	■	■
PINION MATE – DIFF. BEVEL	38425	■	■
WASHER – THRUST, PINION MATE	38426	■	■
SHAFT – PINION MATE	38427	■	■
PIN – LOCK, PINION SHAFT	38428	■	■
LOCK PIN – 4WD PINION SHAFT	38429	■	■
BLOCK – THRUST	38430	■	■
DIFFERENTIAL PRESSURE RING	38431	■	■
DIFFERENTIAL FRICTION PLATE	38432	■	■
DIFFERENTIAL FRICTION DISC	38433	■	■
BEARING – DIFF. SIDE	38440	■	■
DIFFERENTIAL SIDE BEARING ASSY.	38442	■	■
4WD RING & PINION SET	38540	■	■
BEARING – 4WD FRONT PINION	38541	■	■
BEARING – 4WD REAR PINION	38542	■	■
SPACER – 4WD PINION BEARING	38543	■	■
OIL SEAL – 4WD DIFF. SIDE	38544	■	■
FLANGE – 4WD COMPANION	38545	■	■
4WD DIFFERENTIAL CASE	38546	■	■
4WD SIDE GEAR	38547	■	■
THRUST WASHER – 4WD SIDE GEAR	38548	■	■
4WD PINION MATE	38549	■	■
THRUST WASHER – 4WD PINION MATE	38550	■	■
SHAFT – 4WD PINION MATE	38551	■	■
BEARING – 4WD SIDE	38552	■	■
BOLT – 4WD DRIVE GEAR	38553	■	■
VISCOUS COUPLING	38760	■	■
COVER – 4WD REAR	40513	■	■
GASKET – 4WD REAR COVER	40515	■	■
DIFF MTNG INSULTR ASSY.	54710	■	■
TRANSFER CASE			
EXTERNAL OIL FILTER ELEMENT	15210	■	■
POWER SHIFT SWITCH	25127	■	■
TRANSFER MOTOR RELAY	25249	■	■
DIFF LOCK SWITCH	25535	■	■
SWITCH – SHIFT (4WD)	25536	■	■
4WD SHIFT SWITCH	25538	■	■
TRANSFER CONTROL UNIT	28495	■	■
MOTOR ASSY. – TRACTION	29010	■	■
HOUSING – OIL PUMP, SUB	31342	■	■
SEAL ASSY. – OIL	31375	■	■
GEAR – INTERNAL	31431	■	■
GEAR ASSY. – SUN	31460	■	■
PISTON – FRONT CLUTCH	31513	■	■
FLANGE – PRESS	31519	■	■
RETURN ASSY. – SPRING	31521	■	■
PLATE ASSY. – DRIVE	31532	■	■

POWER TRAIN CONTINUED			
Vehicle Components Covered	PNC	CPO Wrap	CPO Only
PLATE — DRIVEN	31536		
DRUM ASSY. — REAR CLUTCH	31543		
HUB ASSY. — REAR CLUTCH	31551		
SOLENOID ASSY. CONTROL	31939		
SWITCH — COMPLETE, ATP	32003		
SWITCH — COMPLETE, NEUTRAL	32004		
BEARING — EXTENSION, REAR	32133		
ASSY. — SPEEDOMETER PINION	32702		
TRANSFER ASSY.	33100		
CASE ASSY. — REAR, TRANSFER	33104		
CASE — CENTER TRANSFER	33105		
CASE — FRONT TRANSFER	33107		
BAFFLE PLATE	33108		
MAIN SHAFT OIL SEAL	33111		
BEARING — BALL, INPUT	33116		
COVER — FRONT TRANSFER	33117		
MAIN SHAFT NEEDLE BEARING	33125		
SLEEVE — COUPLING, LOW & HIGH	33130		
SHAFT — MAIN	33131		
FRONT DRIVE SPOCKET	33134		
FR/RR DRIVE SHAFT BEARING	33135		
BEARING — RADIAL NEEDLE	33136		
BEARING — NEEDLE PILOT	33137		
MAIN SHAFT	33138		
BEARING — BALL, OUTPUT	33139		
REAR CASE OIL SEAL	33142		
SEAL — OIL, REAR CASE	33145		
OIL COVER	33146		
REAR OIL GUTTER	33149		
SHAFT — FRONT DRIVE	33151		
COUPLING, 2WD & 4WD	33153		
CHAIN — TRANSFER	33155		
ROD ASSY. — SHIFT	33166		
SHIFT SHAFT OIL SEAL	33185		
TRANSFER CONTROL LEVER	33210		
FLANGE ASSY. — COMPANION	33211		
SEAL — OIL, FRONT DRIVE	33217		
REAR COMPANION FLANGE ASSY.	33220		
TRANSFER MOTOR RELAY	33251		
PLUG — DRAIN	33312		
BREATHER — AIR, TRANSFER	38322		
ELECTRIC COUPLING ASSY.	38761		
SENSOR ASSY. - HI-LOW POSITION, TRANSFER	86012		
SENSOR ASSY. - FLUID TEMPERATURE, TRANSFER	86013		
SENSOR ASSY. - LOCK POSITION, TRANSFER	86032		
SENSOR ASSY. - ROTARY POSITION, TRANSFER	86033		
FLANGE - REAR COMPANION	86052		
TRANSMISSION			
BOLT — FIXING (FLYWHEEL)	12315		
PLATE ASSY. — DRIVE	12331		
OIL FILLER TUBE	15259		
A/T OIL COOLER ASSY.	21606		
TUBE ASSY. - OIL COOLER	21619		
TUBE ASSY	21620		
TUBE — OIL COOLER	21621		
OIL COOLER HOSE	21631		
RESISTOR — DROPPING (A/T CONT)	22693		
DRIVE CHAIN SWITCH ASSY.	25129		
OVERDRIVE CANCEL SWITCH	25130		
SHIFT PTRN SELECT SW	25131		
SHIFT LOCK RELAY	25206		
SWITCH — KICKDOWN	25390		
SWITCH — CLUTCH INTERLOCK	25402		
A/T STEERING SWITCH	25549		
CONTROLLER ASSY. — SELECT LOCK	28491		
CLUTCH COVER ASSY.	30210		
CLUTCH HOUSING	30400		
SLEEVE — CLUTCH RELEASE	30501		
BEARING — CLUTCH RELEASE	30502		
LEVER — CLUTCH WITHDRAWAL	30531		
PIN — WITHDRAWAL LEVER	30537		
CLUTCH COVER ASSY.	30542		
CLUTCH DAMPER	30600		
RESERVOIR TANK	30609		
CLUTCH MASTER CYLINDER	30610		
CLUTCH OPERATING CYLINDER	30620		
BLEEDER	30621		

Vehicle Components Covered	PNC	CPO Wrap	CPO Only
PUSH ROD	30628		
PUSH ROD	30631		
FLUID FILLER TUBE	30645		
CLUTCH TUBES & HOSES	30650		
CLUTCH ORIFICE ASSY.	30652		
BRANCH CONNECTOR	30656		
CABLE — CLUTCH OPERATING	30670		
BOLT — SELF LOCK CONVERTER	31009		
TRANSMISSION ASSY.*	31020		
AUTO T/M CONTROL UNIT	31036		
SWITCH — OVERDRIVE INDICATOR	31041		
CABLE — THROTTLE	31051		
OIL LEVEL GAUGE & PIPE	31080		
CONVERTER ASSY.— TORQUE	31100		
CONVERTER HOUSING	31301		
CONVERTER HOUSING GASKET	31309		
CASE — TRANSMISSION	31310		
CASE — OVERDRIVE	31322		
EXTENSION/ADAPTER ASSY.	31330		
GASKET — REAR EXTENSION	31335		
SEAL EXTENSION ADAPTOR — OIL	31336		
PUMP ASSY. — OIL	31340		
SEAL — FRONT OIL	31343		
SEAL — OIL, OIL PUMP HOUSING	31344		
ROTOR SET — OIL PUMP	31345		
OIL PUMP ASSY - ELECTRICAL	31347		
GASKET — OIL PUMP	31366		
BEARING RETAINER	31370		
BREATHER — AIR	31381		
DRUM SUPPORT	31385		
PAN ASSY. — OIL	31390		
SIDE COVER	31391		
SIDE COVER GASKET	31396		
GASKET — OIL PAN	31397		
SEALS — ALL INTERNAL A/T	31398		
SHAFT — INPUT	31411		
SHAFT — INTERMEDIATE	31416		
CARRIER ASSY. — FRONT PLANET	31420		
BEARING — NEEDLE THRUST	31428		
CARRIER ASSY. — REAR PLATE	31440		
CLUTCH ASSY. — ONE WAY	31473		
HUB — FORWARD CLUTCH	31475		
SHAFT ASSY. — OUTPUT	31480		
DISTRIBUTOR ASSY. — OIL/GEAR PARKING	31486		
IDLER GEAR	31493		
CLUTCH ASSY. — DIRECT	31505		
CLUTCH ASSY. — FRONT/REVERSE	31510		
DRUM — REVERSE CLUTCH	31512		
CLUTCH ASSY. — REVERSE	31515		
O-RING TORQUE CONVERTER	31525		
REAR/HIGH CLUTCH ASSY.	31540		
DRUM — HIGH CLUTCH	31541		
CLUTCH ASSY. — HIGH	31545		
HUB — HIGH CLUTCH	31550		
CLUTCH ASSY. — FORWARD	31570		
DRUM ASSY. — FORWARD CLUTCH	31571		
OVERDRIVE PLANETARY CARRIER	31580		
HUB — OVERRUN CLUTCH	31591		
CLUTCH ASSY. — OVERRUN	31595		
PISTON — BAND SERVO	31615		
BAND ASSY. — BRAKE	31630		
PISTON — LOW/REVERSE BRAKE	31645		
BRAKE ASSY. — LOW & REVERSE	31650		
ACCUMULATOR	31671		
PINION — SPEEDOMETER	31703		
VALVE ASSY. — CONTROL	31705		
OIL STRAINER	31728		
GOVERNOR ASSY.	31860		
CASE & GEAR — A/T SPEEDOMETER	31883		
LEVER — RANGE SELECTOR	31913		
SEAL — GASKET & O-RING	31916		
SWITCH ASSY. — INHIBITOR	31918		
SHAFT ASSY. — MANUAL	31921		
PLATE ASSY. — MANUAL	31924		
VACUUM DIAPHRAGM	31931		
O-RING SEAL	31933		
REVOLUTION SENSOR	31935		
TURBINE REVOLUTION SENSOR	31936		
SENSOR ASSY - PRIMARY SPEED	31938		

Vehicle Components Covered	PNC	CPO Wrap	CPO Only
DOWNSHIFT SOLENOID	31941		
SOLENOID — LOCKUP	31942		
SHIFT SOLENOID A	31943		
SHIFT SOLENOID B	31944		
SOLENOID — OVERDRIVE CANCEL	31945		
SOLENOID — LINE PRESSURE	31946		
SOLENOID — OVERRUNNING CLUTCH	31947		
LOW TEMPERATURE SENSOR	31958		
ROD ASSY. — PARKING	31970		
SHAFT ASSY. — PARKING PAWL	31986		
SWITCH — REVERSE LAMP	32005		
DOWEL PIN	32006		
DIFFERENTIAL LOCK ACTUATOR SWITCH	32009		
MANUAL TRANSAXLE ASSY.*	32010		
TRANSAXLE CASE	32100		
DRAIN PLUG	32103		
FILLER PLUG	32105		
OIL GUIDE/GUTTER	32107		
OIL GUTTER	32108		
TRANSMISSION MAGNET	32109		
TRANSMISSION FRONT COVER ASSY.	32110		
FRONT COVER GASKET	32112		
FRONT COVER OIL SEAL	32113		
CASE COVER	32129		
REAR EXTENSION ASSY.	32130		
BREATHER	32131		
REAR EXTENSION OIL GUTTER	32132		
YOKE SLEEVE DUST COVER	32135		
REAR EXTENSION OIL SEAL	32136		
ADAPTER PLATE	32137		
BEARING RETAINER	32139		
EXTENSION UPPER COVER	32142		
EXTENSION UPPER COVER GASKET	32143		
BAFFLE PLATE	32150		
MAIN DRIVE SHAFT GEAR ASSY.	32200		
BEARING — PILOT	32202		
MAIN DRIVE BEARING	32203		
SNAP RING	32204		
OUTPUT BEARING	32205		
COUNTER SHAFT	32211		
INPUT SHAFT	32213		
3RD MAIN GEAR	32215		
4TH MAIN GEAR	32218		
BEARING — INPUT SHAFT	32219		
REVERSE COUNTER GEAR	32220		
PILOT BEARING SPACER	32221		
COUNTER SHAFT RR THRUST WASHER	32225		
GEAR — 1ST MAIN	32230		
MAINSHAFT	32241		
GEAR — REVERSE MAIN	32245		
REVERSE IDLER THRUST WASHER	32249		
GEAR — 2ND MAIN	32250		
3RD COUNTER GEAR ASSY.	32259		
GEAR — 3RD MAIN	32260		
INPUT SHAFT — 3RD GEAR	32261		
GEAR BUSHING	32262		
4TH COUNTER GEAR ASSY.	32263		
NEEDLE BEARING	32264		
GEAR — 4TH MAIN	32270		
INPUT SHAFT — 4TH GEAR	32271		
BEARING — MAINSHAFT	32273		
COUNTER GEAR BUSHING	32275		
COUNTER GEAR NEEDLE BEARING	32276		
REVERSE IDLER SHAFT	32281		
GEAR — REVERSE IDLER	32282		
REVERSE IDLER GEAR BEARING	32283		
HUB & SLEEVE SET	32300		
GEAR — 5TH INPUT	32310		
COUNTER SHAFT END BEARING	32319		
MAIN SHAFT BEARING	32339		
GEAR — 5TH MAIN	32340		
6TH MAIN GEAR ASSY.	32341		
C RING HOLDER	32351		
SYNCHRONIZER HUB	32601		
SPREAD RING	32603		
BAULK RING	32605		
COUPLING SLEEVE	32606		
SHIFTING INSERT	32609		
REVERSE BAULK RING	32617		

POWER TRAIN CONTINUED		CPO Wrap	CPO Only
Vehicle Components Covered	PNC		
SYNCHRONIZER ASSY.	32620	■	■
1ST BAULK RING	32680	■	■
2ND BAULK RING	32681	■	■
3RD BAULK RING	32682	■	■
4TH BAULK RING	32683	■	■
5TH BAULK RING	32684	■	■
SPEEDO DRIVE GEAR	32701	■	■
SPEEDO PINION ASSY.	32703	■	■
FORK ROD	32801	■	■
FORK SHAFT BUSHING	32803	■	■
SHIFT FORK	32805	■	■
SHIFT FORK	32806	■	■
FORK ROD	32809	■	■
RING STOPPER	32812	■	■
ROD BRACKET	32813	■	■
INTERLOCK PIN	32815	■	■
INTERLOCK PLUNGER	32817	■	■
SWITCH PLUNGER	32827	■	■
CHECK BALL	32828	■	■
CHECK BALL AND SPRING	32829	■	■
CHECK BALL AND SPRING	32833	■	■
CHECK BALL PLUG	32834	■	■
CONTROL LEVER ASSY.	32840	■	■
CONTROL LEVER	32841	■	■
LOW/HIGH CONTROL LEVER	32847	■	■
PLUNGER	32851	■	■
SELECT CHECK SPRING	32852	■	■
RETURN SPRING PLUG	32854	■	■
RETURN SPRING	32855	■	■
CONTROL ROD SHAFT OIL SEAL	32857	■	■
SEAL — OIL CONTROL	32858	■	■
CONTROL ROD BOOT	32859	■	■
SHIFT KNOB	32865	■	■
CONTROL LEVER HOUSING ASSY.	32868	■	■
CONTROL ROD BRACKET	32881	■	■
SHIFTER CAP	32886	■	■
STRIKING ROD	32892	■	■
STRIKING LEVER	32895	■	■
LEVER ASSY. — STRIKING	32897	■	■
SLIDE BALL BEARING	32898	■	■
TRANSFER ASSY.	33000	■	■
REAR CASE	33103	■	■
CONTROL ROD	34103	■	■
FRONT COVER OIL SEAL	34113	■	■
TRUNNION — SELECT ROD	34410	■	■
DUST COVER HOLDER	34504	■	■
DUST COVER	34506	■	■
SUPPORT ROD	34559	■	■
SUPPORT ROD BRACKET	34560	■	■
SUPPORT ROD DAMPER	34582	■	■
LEVER — CONTROL	34903	■	■
ROD COMPLETE — COMPRESSION	34912	■	■
SHAFT ASSY. — LEVER	34915	■	■
PIN — POSITION PLATE	34917	■	■
SET — CONTROL LEVER KNOB	34920	■	■
SPRING — RETURN	34926	■	■

Vehicle Components Covered		PNC	CPO Wrap	CPO Only
ROD — SELECT	34935	■	■	■
SOLENOID ASSY. — SELECT LOCK	34970	■	■	■
"PARK" POSITION SWITCH — A/T MODELS	34980	■	■	■
FINAL GEAR	38101	■	■	■
BREATHER	38323	■	■	■
CASE — DIFFERENTIAL	38410	■	■	■
GEAR — SIDE	38413	■	■	■
PINION MATE	38415	■	■	■
SHAFT — PINION MATE	38417	■	■	■
BEARING — SIDE	38444	■	■	■
BUSHING — CLUTCH PEDAL	46526	■	■	■
CLUTCH PEDAL	46540	■	■	■
SPRING — CLUTCH PEDAL RETURN	46586	■	■	■
ROAD WHEELS				
ANTENNA-IVCS/GPS	25976	■	■	■
NUT — WHEEL	40224	■	■	■
WHEEL ASSY.	40300	■	■	■
TIRE PRESSURE SENSOR	40700	■	■	■
TIRE PRESSURE SENSOR CONTROL UNIT	40720	■	■	■
TIRE PRESSURE ANT FRONT	40741	■	■	■
TIRE PRESSURE ANT REAR	40742	■	■	■
STEERING SYSTEM				
PULLEY — IDLER	11925	■	■	■
BRACKET — IDLER PULLEY (FOR P/STRG PUMP)	11935	■	■	■
BRACKET — OIL PUMP	11940	■	■	■
BAR — OIL PUMP ADJUSTING	11945	■	■	■
TCS MOTOR ASSY.	16120	■	■	■
LAMP — HICAS WARNING	25020	■	■	■
SLIP RING	25694	■	■	■
STEERING SENSOR ASSY.	28475	■	■	■
CONTROL UNIT	28505	■	■	■
VARIABLE RATIO STRG CONTROL	285H0	■	■	■
CABLE — KEY INTERLOCK	34908	■	■	■
STOPPER BOLT CAP	40039	■	■	■
HOUSING — STEERING GEAR	48011	■	■	■
PINION — STEERING GEAR	48023	■	■	■
BEARING — PINION/WORM GEAR	48025	■	■	■
STEERING COUPLING	48070	■	■	■
UPPER STEERING JOINT ASSY.	48071	■	■	■
STEERING COUPLING FLANGE	48076	■	■	■
JOINT ASSY. — STEERING LOWER	48080	■	■	■
RACK — STEERING GEAR	48100	■	■	■
PINION OIL SEAL	48125	■	■	■
STEERING GEAR BOOT	48203	■	■	■
ADJUSTER	48231	■	■	■
BRACKET — RACK MOUNTING UPPER	48353	■	■	■
INSULATOR — STEERING GEAR MOUNTING	48376	■	■	■
WHEEL ASSY. — STEERING	48400	■	■	■
NUT — LOCK	48401	■	■	■
HEATED STEERING WHEEL ASSY.	48402	■	■	■
BUTTON ASSY. — HORN	48420	■	■	■
COVER — STEERING COLUMN SHELL	48470	■	■	■
ROD ASSY. — SIDE/DRAW LINK	48510	■	■	■
NUT — LOCK, SIDE ROD	48514	■	■	■

Vehicle Components Covered		PNC	CPO Wrap	CPO Only
SOCKET ASSY. — SIDE ROD OUTER	48520	■	■	■
SOCKET ASSY. — SIDE ROD INNER	48521	■	■	■
NUT — SLOTTED	48523	■	■	■
SWITCH ASSY. — IGN., WITH STEERING LOCK	48700	■	■	■
TRANSFER GEAR ASSY.	48760	■	■	■
TELESCOPIC LEVER	48815	■	■	■
SHAFT ASSY. — STEERING COLUMN	48820	■	■	■
SHAFT — UPPER COLUMN	48821	■	■	■
LOWER COLUMN SHAFT ASSY.	48822	■	■	■
STEERING COLUMN LOWER SHAFT	48823	■	■	■
JACK TUBE & CLAMP ASSY.	48850	■	■	■
JACKET TUBE ASSY.	48860	■	■	■
UPPER JACKET TUBE	48861	■	■	■
HOLE COVER ASSY.	48950	■	■	■
HOLE COVER INSULATOR BRACKET	48958	■	■	■
STEERING COLUMN CLAMP	48960	■	■	■
JOINT COVER	48967	■	■	■
LEVER — TILT	48970	■	■	■
TILT MOTOR ASSY.	48990	■	■	■
TELESCOPIC MOTOR ASSY.	48991	■	■	■
TILT SENSOR ASSY.	48992	■	■	■
TELESCOPIC SENSOR ASSY.	48993	■	■	■
RACK & PINION ASSY.	49001	■	■	■
PUMP ASSY. — OIL, POWER STEERING	49110	■	■	■
TANK — RESERVOIR/PUMP — POWER STRG.	49115	■	■	■
CAP — OIL PUMP	49181	■	■	■
OIL PUMP FILTER	49182	■	■	■
SEAL — OIL, PINION	49226	■	■	■
PACKING — RACK	49297	■	■	■
SEAL — OIL, STUB SHAFT	49365	■	■	■
BUSH ASSY. — RACK	49522	■	■	■
O-RING	49525	■	■	■
TUBE — CYLINDER	49541	■	■	■
POWER STEERING HOSE & TUBE SET	49710	■	■	■
PRESSURE TUBE ASSY.	49716	■	■	■
HOSE ASSY-SUSTION, POWER STEERING	49717	■	■	■
TUBE ASSY-POWER STEERING	49719	■	■	■
TUBE & HOSE ASSY. (STRG. GEAR TO PUMP)	49720	■	■	■
POWER STEERING OIL COOLER	49721	■	■	■
POWER STEERING HOSE & TUBE	49722	■	■	■
HOSE-RETURN, POWER STEERING	49724	■	■	■
POWER STEERING RETURN HOSE	49725	■	■	■
BREATHER TUBE	49731	■	■	■
SWITCH — OIL PRESSURE	49761	■	■	■
AIR CONTROL VALVE	49762	■	■	■
VALVE — FLOW CONTROL	49810	■	■	■
PRESSURE CONTROL VALVE ASSY.	49836	■	■	■
COMPRESSION ROD	54468	■	■	■
COMPRESSION ROD	54471	■	■	■
REAR AXLE BALL JOINT ASSY.	55154	■	■	■
HICAS ELECT CYL ASSY.	55705	■	■	■
HICAS POWER CYLINDER ASSY.	55710	■	■	■
HICAS MOTOR ASSY.	55740	■	■	■
MAIN POSITION SENSOR-HICAS	55741	■	■	■
REAR PRESSURE HOSE & TUBE SET	55750	■	■	■
CUT OFF VALVE ASSY.	55780	■	■	■

Description	Components Covered
CPO	1,340
CPO Wrap	1,694
CPO Wrap adds an extra	354

Disclaimer: This brochure, which is limited in size, is not a contract. Read a sample Infiniti Elite Extended Protection Plan contract at your retailer, and read your actual contract/agreement. Your contract's terms, conditions, exclusions and limitations control.

In Florida, Infiniti Elite Extended Protection Program is backed by NESNA, Inc., P.O. Box 685004, Franklin, TN, 37068-5004. License #60128

Any necessary replacement parts will be made using Genuine Infiniti new or remanufactured parts, or Infiniti-approved parts.

Infiniti, the Infiniti Logo and Infiniti Model Names are Infiniti Trademarks.

© 2016 INFINITI 1-800-662-6200 owners.infinitiusa.com/Elite



1,700 reasons to feel secure

With up to 1,700 vehicle components covered,
virtually every aspect of your Infiniti's
mechanical performance is well protected

owners.infiniti.com/Elite



INFINITI.

Inspired Performance™



Elite Protection Program*

Certified Pre-owned Wrap Component Coverage



Tranquility. Beyond Protection.

owners.infiniti.com/Elite



INFINITI.

Inspired Performance